



THORNE &
DERRICK
INTERNATIONAL

Thorne & Derrick
+44 (0) 191 410 4292
www.powerandcables.com



Removal: AX-S™ Composite Covers

Step 1



Start by unscrewing the two screw bolts in both corners with a flat head screwdriver.

Step 2





Remove the grommet on the closest side to where the operative is to remove the cover (Where the cover will be lifted to). Use a flat headed screwdriver to push under the head of the grommet until it wedges up.

Step 3



Now remove the wedged up grommet with your fingers.

Step 4

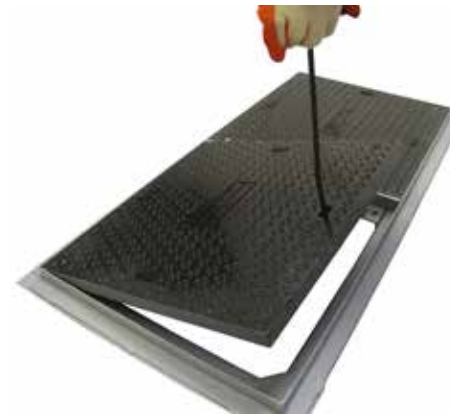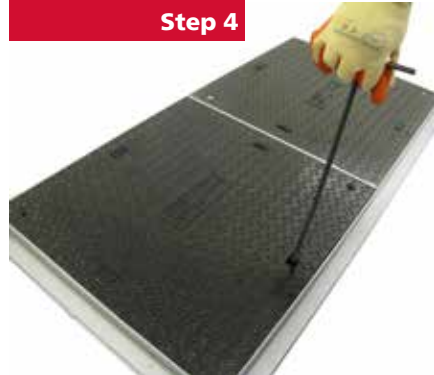

Now put the supplied composite lifting key into the hole and twist so that the hook is gripped under the cover. Begin to lift as seen in the photos.

Step 5



Once the composite cover is lifted to a safe height grab hold of the cover and safely remove from the frame.

This process can now be repeated until the safe removal of all the covers.

Please ensure the correct **PPE** is worn at all times.